



EvoTech Pro Wireless Tattoo Pen Machine

INCLUDES

EvoTech Pro Wireless Tattoo Pen Machine
User Manual
USB-C Charging Cable
Extra Grip

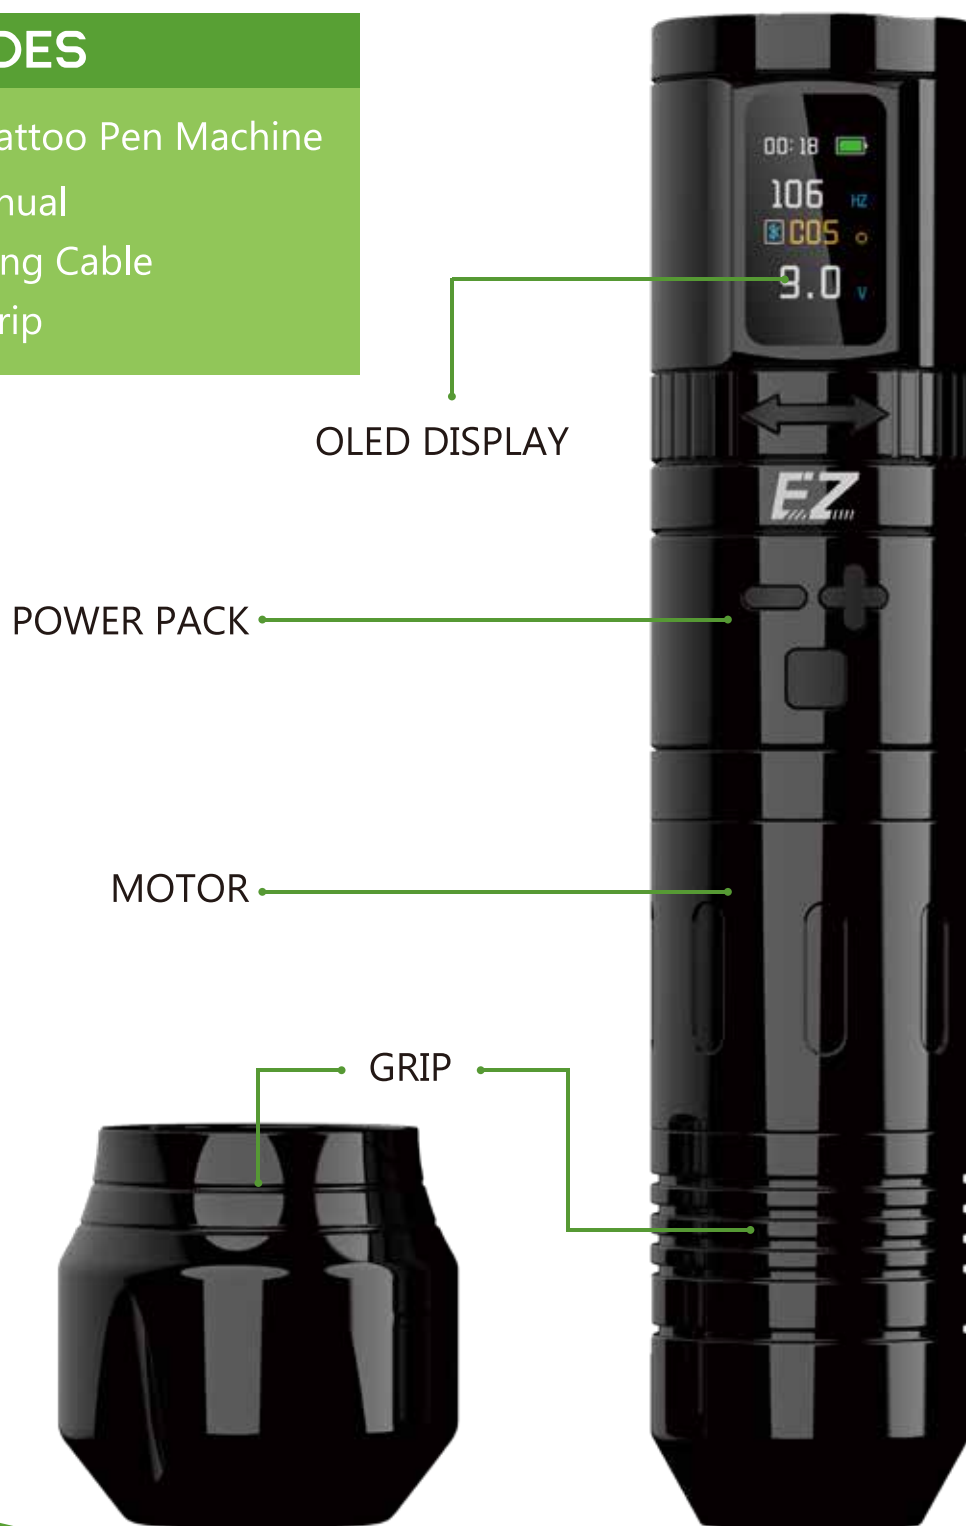

OVERVIEW

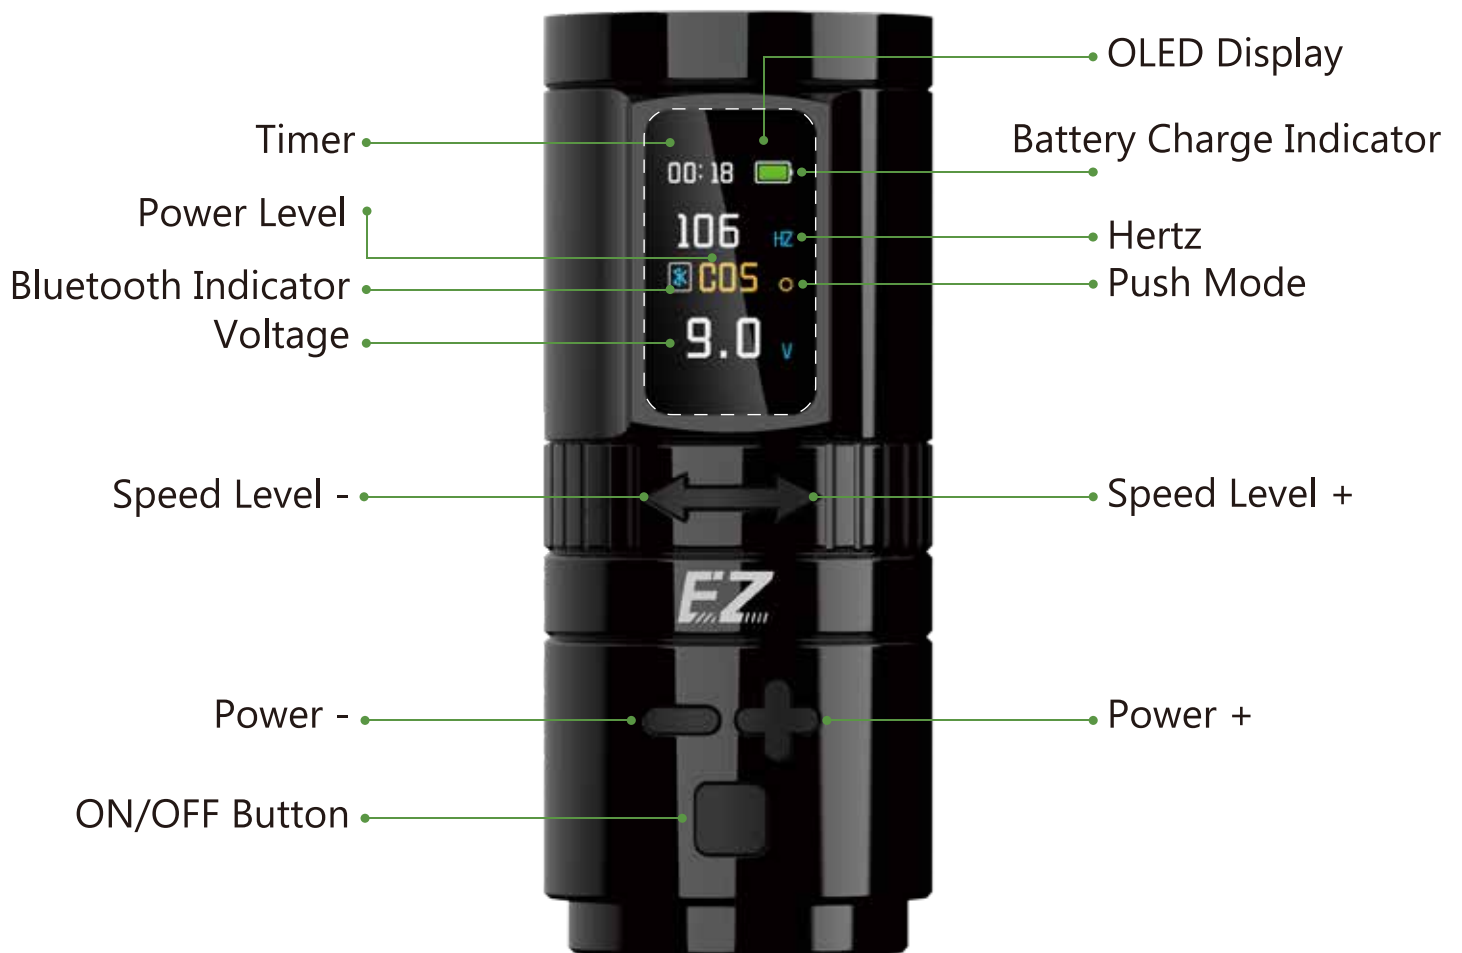

2000
mAh

Battery Capacity

2.5
hrs

Recharging Time Powerpack Working time

5-7
hours
Approx



Bluetooth

INSTRUCTION

POWER ON/OFF

Press And Hold The  Button For 2 Seconds To Turn EvoTech Pro On/Off.
Press The  Button To Start/Pause EvoTech Pro.

NOTE: Evotech Pro Will Automatically Shut Down If It Remains Inactive For More Than 5 Minutes.

POWER +/-

Press To Adjust Voltage.
Press And Hold To Adjust Voltage Quickly.



SPEED(PWM) +/-

Press  To Increase Speed.
Press  To Decrease Speed.
Speed Level From C01 To C10.



TIMER

The Timer Will Initiate Automatically When The Device Is Turned On.
The Timer Will Pause When The Device Is Paused.
The Timer Will Reset When The Device Is Turned Off.



PUSH MODE

Press And Hold Both + And - Button To Activate Push ModeThe,
OLED Display Will Show A Circle  To Indicate That Push Mode Is Active.
Note:Push Mode Can Only Be Activated When Bluetooth Mode Is Off.



NEEDLE DEPTH ADJUSTMENT


To Adjust Needle Depth, Hold The Device Body While Turning The Grip. A Counter Clockwise Turn Decreases Depth, While A Clockwise Turn Increases Depth.



SPECIFICATION

Motor:	EZ Customized External Rotor Brushless Motor
Material:	Aircraft aluminum
Stroke Length:	3.5mm
Operating Voltage:	5 - 12V DC
Rpm:	9000rpm $\pm$ 10%
Switch Frequency:	60 - 150 Hz
Needle Protrusion:	0 - 4.5 mm
Dimensions($\varnothing$ X L):	32 - 40 mm x 151 mm
Weight:	6.63oz (188g) with 32mm Grip 7.68oz(218g) with 40mm Grip

COMPATIBLE WIRELESS FOOTSWITCH (MT)

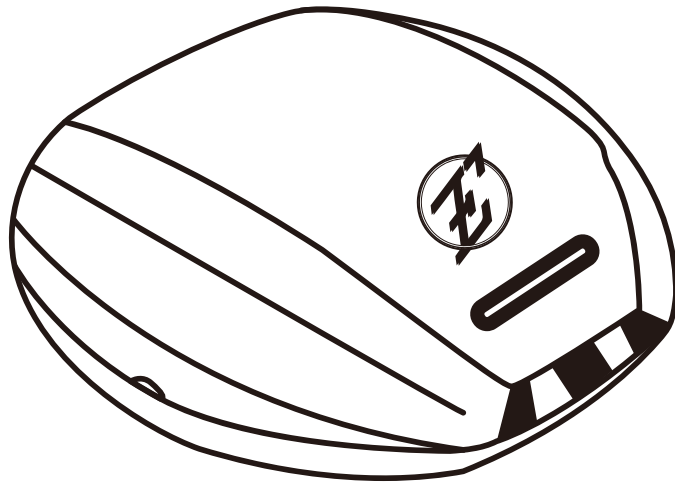

INSTRUCTION

Use The Wireless Footswitch To Start/Pause The EvoTech Pro Wireless Tattoo Pen Machine.

POWER ON/OFF

Slide The Switch To Turn On/Off.

PAIRING

- 1) Turn On The Footswitch. The Flashing Red And Blue Lights Indicate That The Footswitch Is Ready For Pairing.
- 2) Ensure That The EvoTech Pro's Bluetooth Mode Is Enabled. It Will Automatically Connect To Your Footswitch.
- 3) Once Connected, The Flashing Blue Lights On The Footswitch Will Indicate A Successful Connection.
- 4) After The Initial Pairing, EvoTech Pro Will Automatically Connect To The Footswitch.

WORKING MODE

There Are Two Distinct Working Modes Of The Footswitch:



Working Mode Indicator

Maintain Mode

To Activate Maintain Mode, Perform A Double Tap On The ON/OFF Button. When The  Symbol On The OLED Display Is Turned Off, It Indicates That Maintain Mode Is Active.

In This Mode, Tap And Hold The Footswitch To Keep The Device Running. Release The Footswitch To Pause The Device.

Momentary Mode

To Activate Momentary Mode, Double Tap The ON/OFF Button.

The  Symbol On The OLED Display Will Be Lit To Indicate The Activation Of Momentary Mode.

In This Mode, A Single Tap Will Start Or Pause The Device.

WARRANTY INFORMATION

MOTOR:	One Year Warranty
BATTERY PACK:	Six Months Warranty
SPARE PARTS:	Three Months Warranty

COVERAGE

This Warranty Covers The Evotech Pro Wireless Pen Machine Purchased From Our Online Store Or Authorized Distributors Worldwide.

The Warranty Period Starts From The Date Of Purchase.

WHAT IS NOT COVERED

Damage To The Product Caused By Human Factors.

Product Damage Resulting From External Electrical Failures Or Accidents.

IMPORTANT INFORMATION

This device does not support fast charging or super-fast charging.

Using fast charging may damage the battery.

BATTERY PROTECTION

- 1) The Battery Is Equipped With Circuitry To Protect It From Extreme Temperatures, Over-discharge, And Over-charge.
- 2) It Will Automatically Turn Off If Overloaded Or Exposed To High Temperatures During Use, Such As In Situations With Excessive Strain.
- 3) The Shutdown Occurs Temporarily When The Operating Temperature Exceeds 158°F (70°C) And Resumes When It Returns To 152°F (67°C).

WARRANTY CARD

Product Name: _____

Date of Purchase: _____

Where Purchased: _____

Address: _____

Email: _____

Customer Acknowledgement:

My Signature Below Acknowledges That I Have Read, Fully Understand, And Accept This Limited Warranty Agreement.

SIGNATURE: _____

DATE: _____

Send This Copy To:

EZTATTOO - AFTER-SALES DEPARTMENT

Email:sales@eztattooing.com

 @EZTATTOO OFFICIAL

www.eztattoosupply.com

Designed and Manufactured in China by EZ